




FEATURES

The BT 02 is a battery & alternator tester designed to save time on electrical issues: it gives an instant diagnosis.

- For 12V Lead Acid batteries only.
- Check alternator or battery's health.

DRAWING

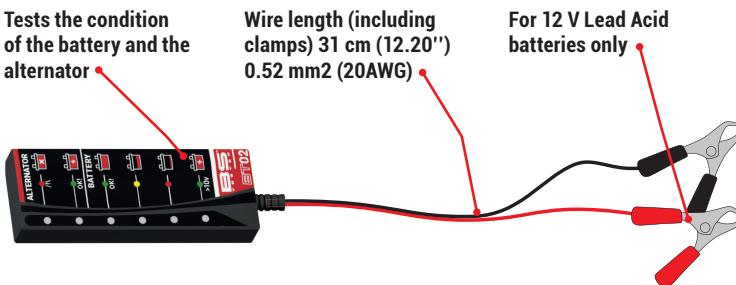

ALTERNATOR CHECK

- Run the vehicle with all electrical equipment off (lights, radio...)
- Run the vehicle with all electrical equipment on (lights, radio...)
- The green LED should light on both tests meaning the alternator is GOOD
- A red LED indicates the alternator is over charging: must be controlled
- No LED light indicates the alternator may not be charging: must be controlled

SUITABLE FOR



BT02

BATTERY & ALTERNATOR TESTER

INSTRUCTIONS

- Connect the Red crocodile clip to the Positive (+) battery terminal
- Connect the Black crocodile clip to the Negative (-) battery terminal

Battery check:

- Switch on the vehicle lights for 1-2 minutes
- Disconnect the battery from the vehicle
- Wait 10 minutes
- Connect the tester

BOX CONTENT

1x BT02 - Battery and alternator tester



BATTERY COMPATIBILITY

